

34" Prism Backlit Banner Stand Acrylic Shelf

Parts for Assembly:



2 - Shelf brackets





1 - 34 inch x 10 inch
Acrylic Shelf



2 - Clear caps

Step-by-Step Instructions:


Shelf brackets must be attached before the frame is fully assembled.

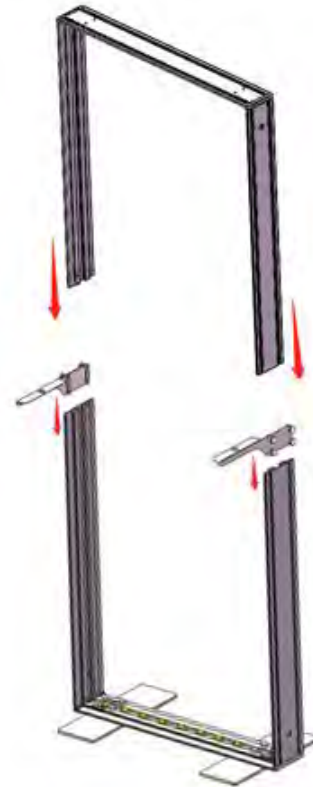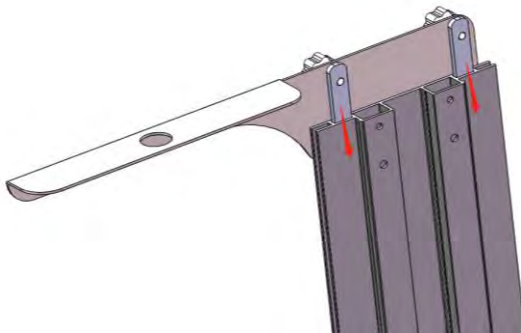

1: Loosen all 4 knobs on each shelf bracket and slide metal bars into side frame panels. Tighten knobs to hold shelf bracket in place. Complete assembly of frame.



2: Apply SEG graphics using 34" Backlit Banner Stand instructions.

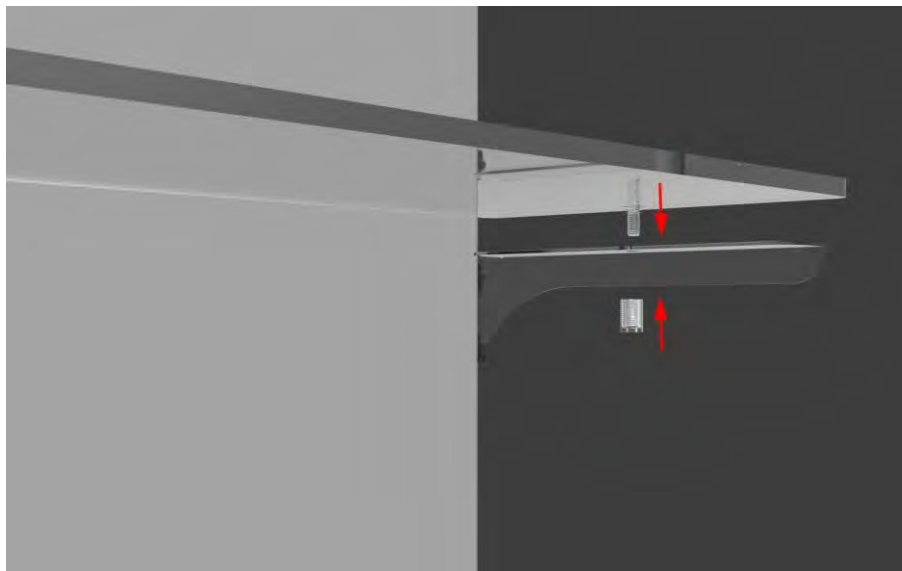

3: Place acrylic shelf on top of the brackets, aligning threaded pegs with holes in brackets. Screw on clear caps underneath to keep the shelf in place.