


## ASSEMBLY




1. Unbuckle the frame and set the frame on the floor on it's back. Pull the corners out to spread the frame out. The adjustable feet will be on the bottom/front of the frame after it is stood up.



2. Engage all of the perimeter locks by pressing down on the hub above.

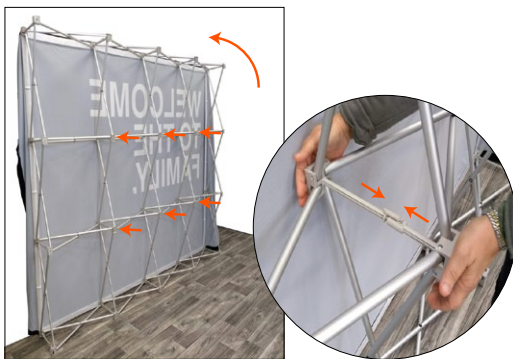

3. Stand the frame up with the adjustable feet on the bottom. Engage the center frame locks.

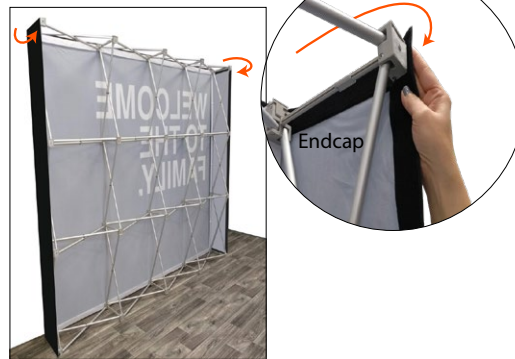


4. Pulling the graphic taut, wrap the endcap flaps around the side of the frame and attach to the velcro tabs.



5. Adjust the front feet if the floor isn't level.

## DISASSEMBLY

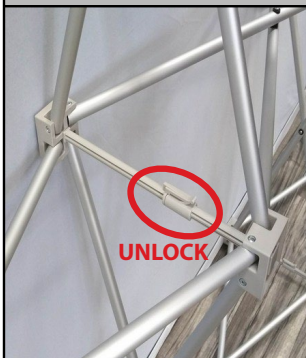

A. Unhook endcap velcro from frame leaving the rest of the graphic attached to frame.  
 B. **UNLOCK ALL LOCKS.** Failure to disengage all hooks may cause frame damage when collapsing frame.  
 C. Let gravity slowly collapse frame. If you feel resistance, double-check to make sure all hooks are unlocked.  
 D. Lay the frame on it's back with the frame partially open. Fold the endcaps over the front and gently tuck the excess fabric down inside the frame as seen on assembly steps 1 and 2 above.



6. Attach optional LED lights to the top hubs by sliding them on from the side.

**DO NOT FORCE THE FRAME CLOSED**