



StoreFront Product Stand Clothes Rack Assembly Instructions

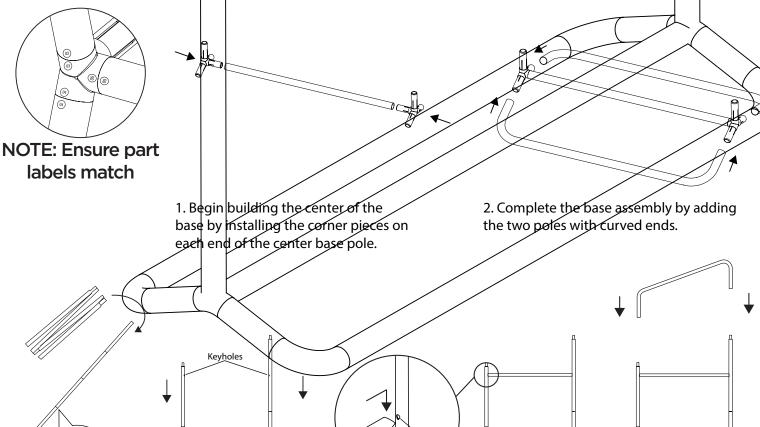


- 3. Extend the bungeed vertical poles and attach them to the base. Make sure the keyholes face the each other.
- 4. Hang the clothes rod between the two vertical poles by attaching each end to the keyhole.

Keyhole

5. Install the angled top. Evenly press on both ends during installation.

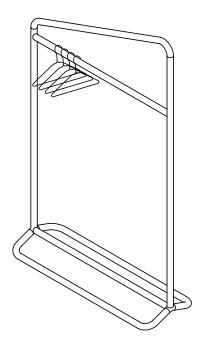


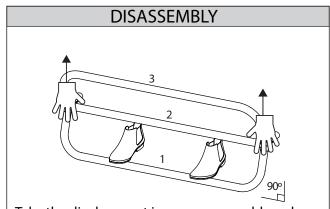


Take the display apart in reverse assembly order. If it is difficult to disassemble the base, place feet as shown above. Pull up at both ends of pole 2 to remove pole 1. Pull with even pressure. Flip the part and repeat to remove tube 3.




StoreFront Product Stand Graphic Panel Assembly Instructions

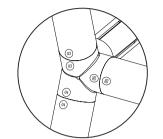


NOTE: Ensure part labels match

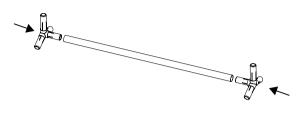

1. Begin building the center of the base by installing the corner pieces on each end of the center base pole.

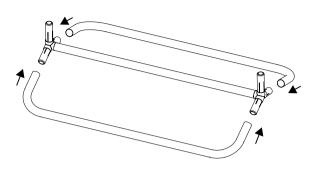


2. Complete the base assembly by adding the two poles with curved ends.

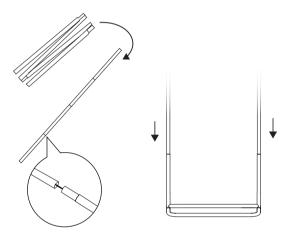


3. Extend the bungeed poles and attach them to the base.

from one frame base.

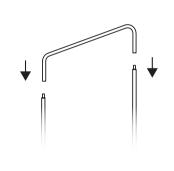


5. Install the angled top. Evenly press on both ends during installation.

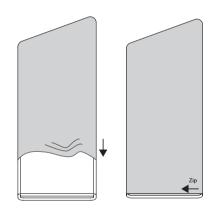

6. Pull the graphic over the frame. Pull the zipper end down around the bottom pole and zip it closed.

A. To interlock frames, remove one curved pole B. Reattach the curved pole pole through the second

frame's base.

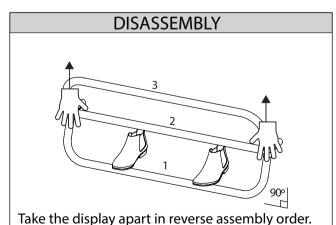

If it is difficult to disassemble the base, place feet as shown above. Pull up at both ends of pole 2 to remove pole 1. Pull with even pressure. Flip the part and repeat to remove tube 3.