


# 10' x 10' Aluminum Tent with Canopy


## Step by Step Instructions

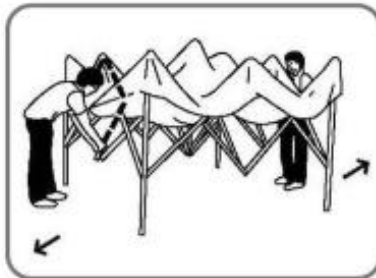


Place tent graphic in center of the area to be sheltered. Have 2 people stand on opposite sides, grasp two outer legs, lift off the ground and step backwards, stopping at arms length.




Grasp at the bottom of the canopy tent on opposite sides, as shown. Lift up and step backwards until tent is fully opened.

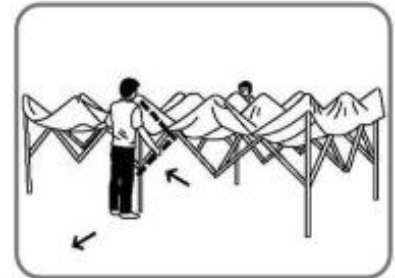

**Note:** For 20' x 10' tent each person should move to middle leg of 20ft side . Grasp bottom of the tent, lift up and step backwards at the same time until tent is fully opened.

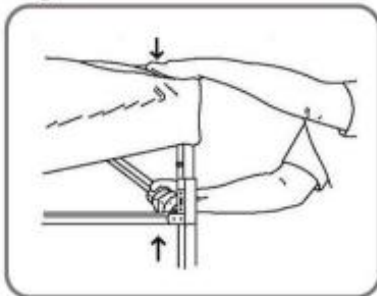

Engage the push button at each corner by pushing up with one hand while holding down top of leg with the other hand. Push button will engage in the hole by locking in.

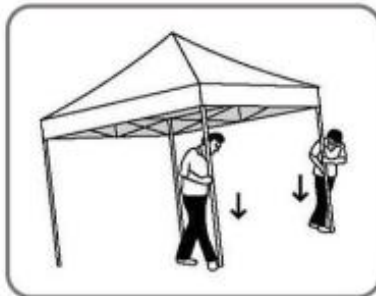

Lift two adjacent outer legs up and pull out the inner legs until snap locks. Repeat on all legs. Raise or level the tent using push button found near bottom of each

### IMPORTANT

**Windy Condition** - Use stake kit or Sand bags.

**Heavy Wind** - Take tent down.

**Wet Fabric** - Let tent dry before closing.

**Storage** - Use cover bag when not in use.

**Rain** - Do not leave tent unattended.