



Note: Assembly for all wings and headers are the same.

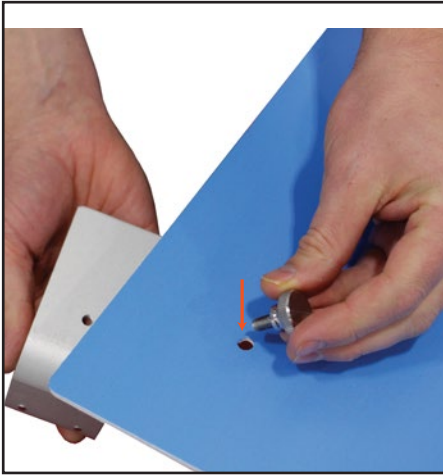

1. Align the C-Clamp hole with the graphic hole. Insert standoff knob through holes.

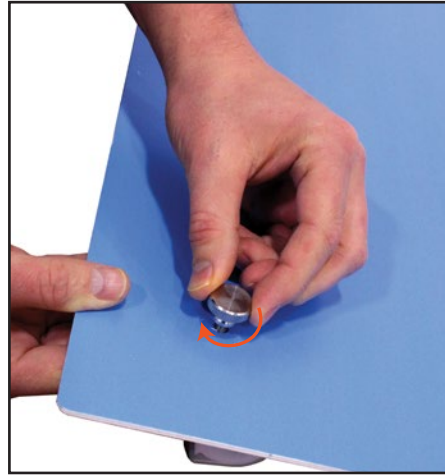

2. Twist standoff knob until secure. Do not overtighten.



3. Attach C-Clamp to frame in desired location.

Wing Arrangement Options:

Wings may be oriented inward or outward from display.



Inward



Outward