1. Connect vertical connectors together. Tighten both the Screw and Support Knobs.
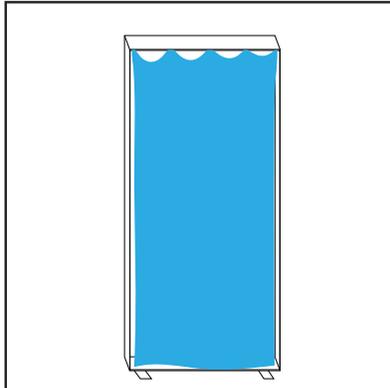
2. Connect the frame corners together. Tighten both Screw Knobs.

3. Install the horizontal support bar between the vertical poles using the Support Knobs.

4. Mount feet and tighten Screw Knobs.

5. Install the silicone-edged graphics to the frame.

See Page 2 for more details.

Graphic Installation
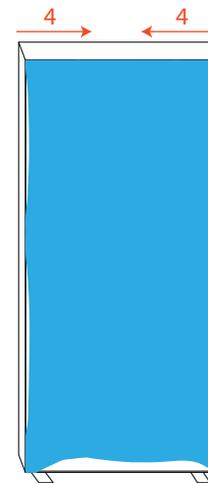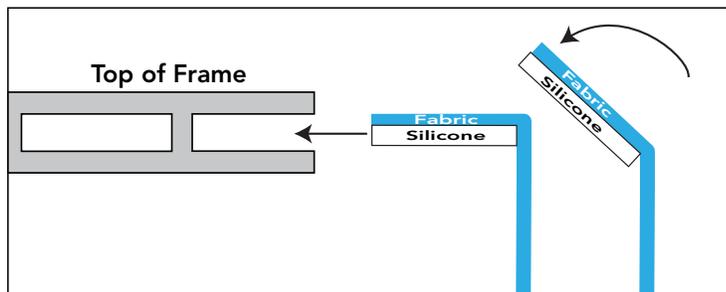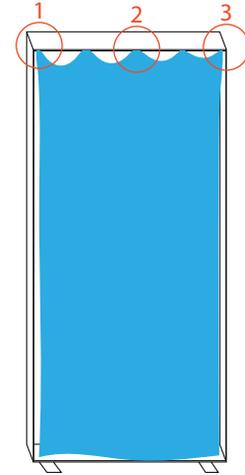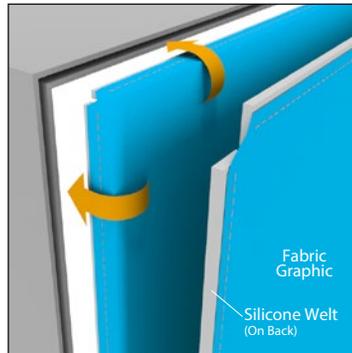
 Caution! Installing silicone-edged graphics is techniqe sensitive; Practice will shorten installation time.

 Handle graphics with care with clean hands in a clean environment. Cloth or latex gloves recommended. Keep graphics away from sharp objects.

1. Using at least two people, carefully stand the display up. Starting in top-left corner, turn and tuck graphic and silicone into the channel. (#1 on diagram) Use your fingertip (not fingernail) for installation.
Note: For large frames, a step-ladder is may be required for graphic installation.

Fabric Graphic

Silicone Welt (On Back)

Top of Frame

Fabric
Silicone

Fabric
Silicone

2. Work across the top, tacking the graphic into the channel every two to three feet. (#2 on diagram)

3. Tuck top, right corner into channel. (#3 on diagram)

4. Tuck remainder of top edge of graphic into top channel. (#4 on diagram)

5. Inspect graphic for hard fold lines in the fabric. If desired, smooth them out using a steamer from the back side of the graphic.

6. Tuck bottom two corners. (#6 on diagram)

7. Tack middle of sides. (#7 on diagram)

8. Working from top to bottom, tuck remaining silicone in on both sides. (#8 on diagram)

9. Tack middle of bottom. (#9 on diagram)

10. Tuck remaining bottom edge, working from outside to inside. (#10 on diagram

11. Repeat installation steps for fabric on back of frame.